

#### To Connect to the Fuel Injector

1. Connect the Inductive Pickup around the single battery supply wire going to the coil or module. Confirm the pickup is facing the proper direction by selecting the Drive Time function. If Drive Time is full scale at Idle, the Pickup is on backwards.

#### Measurements

1. Peak Amps is the peak current driving the coil. It is regulated by the module. A typical Peak Amp reading should be about from 5 to 10 amps.
2. Build Time, or ramp time, is the time it takes the amperage to reach its maximum.
3. Drive Time is the time the coil is actively driven.

#### Analysis of Test Results

If Peak amps is low look for a bad connection between the module and coil. Long Build Time may be caused by high resistance in the connection from the ignition module to the coil. Short Build Time may be caused by a shorted coil. Build Time will be slightly longer during cranking.

#### Using the Primary Ignition Probe with a Labscope

The 72 sends a signal that is scaled at .1 volts (or 100mV) per amp detected. A 4 amp peak will appear 0.4 volts high on the labscope. Use a BNC Cable with a BNC to Banana Adapter (like Ferret P/N W090-10) to adapt the 72 to work on most labscopes or graphing multimeters.

Engine/ Company	Peak Amps	Build mSec	Engine/ Company	Peak Amps	Build mSec
Chrysler 3.3L	5.0	4.0	GM-2.0L	8.0	3.0
Chrysler 3.5L	5.0	4.0	GM-2.2L	9.0	3.0
Chrysler 3.8L	5.7	3.8	GM-2.3L,(Quad 4)	8.0	2.5
Ford 1.9L	5.0	3.1	GM-3.0L	6.5	3.8
Ford 3.0L	5.0	3.5	GM-3.1L	10.0	2.8
Ford 3.8L	5.0	3.5	GM-3.8L (Type I)	7.0	3.8
Ford 4.0L	5.0	3.5	GM-3.8L (Type II)	9.5	3.0
Ford 4.6L	5.5	3.3	Saturn 1.9L	7.6	3.3

#### Technical Support

For additional information or technical assistance, please contact Ferret Instruments at (800) 627-5655 or [www.ferretinstruments.com](http://www.ferretinstruments.com).

Test ignition coils and modules without piercing wires or backprobing connectors. Can be used on Distributor, DIS, Coil near Plug and Coil on Plug Ignitions.

Use a LabScope to view the fuel injector pattern.


20 segment bar graph displays Peak Amps, BuildTime or Drive Time at the press of a button.

Find defects in ignition coils and modules by using current ramping measurements.

Powered by a 9 Volt battery.

3 Year Limited Warranty

[www.ferretinstruments.com](http://www.ferretinstruments.com)

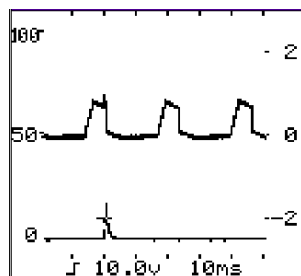

## **SAFETY PRECAUTIONS**

- Always wear safety glasses, or other eye protection when testing vehicles. Be extra careful near batteries and moving parts.
  - Battery gas is highly explosive.
    - a. If a battery explodes, flush the acid away from person's skin with generous amounts of water. Follow up with a neutralizing solution of baking soda and then more water. Medical treatment for acid burns may be necessary. Treat clothing, vehicle parts, and equipment similarly. Any acid traces inside equipment must be removed by generous rinsing. Dry off equipment afterwards and place in a warm 50° C (120° F) oven until thoroughly dry.
    - b. Never use a wrench on the ungrounded battery terminal until the grounded one has been disconnected. Contact between the vehicle body metal and the "hot" terminal can cause sparks to ignite gas or even weld tools into a battery short circuit.
    - c. Keep the space around a battery well ventilated.
    - d. Do not make sparks or allow flames near batteries.
  - Before working on a vehicle, set the brakes and block the wheels. Beware of automatic parking brake releases.
  - Keep your work area well ventilated and free of exhaust. Engine exhaust contains deadly poisons.
  - Avoid electrical shocks caused by getting too close to live ignition wires or touching the coil TACH terminal. A person's reaction near a running engine can be more damaging than the shock.
  - Keep spark producing devices at least 0.5m (18") above the floor to reduce the hazard of igniting gasoline vapor.
  - Do not let test leads wind up in a fan or pulley. Route leads away.
  - Remove finger rings and metal wristbands. They can short terminals and become very hot from electric current.
- 

### **FERRET INSTRUMENTS LIMITED PRODUCT WARRANTY**

FERRET INSTRUMENTS, INC. of Cheboygan Michigan, warrants to the original purchaser that any products manufactured or supplied by Ferret Instruments, Inc. are free from defects in materials and workmanship for a period of three years from date of purchase. Our sole obligation for a product within the above warranties will be to repair or replace, at our option, any defective parts and return the product to the sender within the U.S.A., shipping prepaid, if it is sent to our Repair Department shipping prepaid and accompanied by proof of purchase. The above warranty is extended for the flashtubes in timing lights which are within five years of the date of manufacture.

### **EXTENDED SERVICE POLICY**

A Ferret product less than five years old according to the date of manufacture, and which is returned with transportation charges prepaid to: Ferret Instruments, Inc., Repair Department, 1310 Higgins Drive, Cheboygan, MI 49721, will be repaired or replaced, at factory option, for a service charge not to exceed 40% of the latest factory suggested user price; plus return transportation charges and insurance. If the product has been discontinued, the nearest equivalent product may be substituted.

This Warranty and Extended Service Policy do not apply to products which have been altered outside the factory; or repaired by anyone other than the factory or its authorized service centers; or which have been damaged from accidents, negligence, or abuse; or have been used differently than described in the printed instructions. Please note that wear and tear on leads and replacement of consumable (paper, oxygen sensors, Nox Sensors, etc.) items, is not covered by warranty.

Ferret Instruments, Inc.'s sole liability and buyer's exclusive remedy is limited to repair or replacement of the product as stated in the Limited Product Warranty and the Extended Service Policy. THERE ARE NO OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND FERRET INSTRUMENTS, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM THE SALE OR USE OF THE PRODUCT.

Some states do not allow limitations on the length of implied warranties nor exclusion or limitations of incidental or consequential damages, so that the above limitations and/or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.